

Contec Hands Free Mop Saturation System 2.0

IMPROVED saturation system for use with Contec's flat mops

Designed to simplify the cleanroom mopping process, Contec's Hands Free Mop Head Saturation System allows mop heads to be presaturated prior to being passed into the controlled environment. The system allows mop heads to be installed AND removed "hands-free" reducing the risk of cross contamination and speeding up the cleaning and disinfection process.

There is a choice of a system, with either two 15L polypropylene buckets or two 10L stainless steel buckets. A stainless steel cart holds the buckets, 2 easy-fit mop applicator frames, a diffuser tray, and the hands-free mop head removal system. The utility handle allows two small buckets (6L) to be positioned on the handle providing additional storage for extra supplies such as clean mop heads, spray bottles, wipes, and other items as needed. A convenient clip and holder for the mop frame and handle when it is not in use, are also fixed to either side of the cart.

Being lightweight and manoueverable the trolley is very easy to use. The trolley is fitted with four autoclavable castors, meaning the whole trolley can be autoclaved before use. Each bucket is designed to allow 10 flat mop heads to be presaturated before being taken into the cleanroom. Or, the second bucket can be used for the dilution of a concentrate and to store the diffuser tray when not in use.

The mop heads are placed on the easy-fit mop applicator frame which coupled with the mop head design, means the mop heads can be fitted to the mop frame *hands-free*. A stainless steel disinfectant diffuser tray helps to evenly saturate every mop head. Once used the mop heads can also be removed *hands-free* using the unique mop removal system, straight into a waste bag if required.



Mop Saturation System with polypropylene buckets (2941U2D)

Features	Benefits
Hands-free mop head application and removal	<ul style="list-style-type: none"> • Easy and convenient to use - used mops can be easily disposed of • Reduces risk of cross contamination as dirty mops don't need to be handled
Stainless steel diffuser and "A" frame	<ul style="list-style-type: none"> • Allow mops to be presaturated prior to being passed into the cleanroom
Utility handle 1.04m high	<ul style="list-style-type: none"> • Comfortable height allows for ease of use
Utility handle basket holds 2 x 6L buckets	<ul style="list-style-type: none"> • Additional storage for clean mop heads, solution bottles, wipes, and other cleaning supplies if needed
Four rotating, lockable, quiet castors	<ul style="list-style-type: none"> • Excellent manoeuvrability; ideal for small cleanrooms & tight spaces • Trolley position can be secured during cleaning tasks
Improved on trolley storage for two mop handles and frames	<ul style="list-style-type: none"> • Allows convenient storage of two mop handles and frames keeping mops out of the way • Keeps mops readily at hand when changing locations
100% autoclavable, electropolished stainless steel frame	<ul style="list-style-type: none"> • Safe for autoclave at 121°C for 30 minutes allowing it to be used in the most critical environments • Compatible with most cleanroom disinfectants and cleaners

Product Features

Stainless steel diffuser

A stainless steel disinfectant diffuser tray helps to evenly saturate every mop head. Simply pour the disinfectant straight into the diffuser and wait for 5 mins for full saturation.




Stainless steel "A" frame

Each bucket has a stainless steel easy-fit mop applicator frame which coupled with the mop head design, means the mop heads can be fitted hands -free.



Hands-free mop head removal tool

The hands-free removal tool is suitable use with the magnetic QuickTask Flat Mop Head Frames, 2906 (stainless steel) and 2699P (polypropylene). It also includes a frame for holding a waste disposal bag. The waste bag holder can be used with sterile or nonsterile waste bags for complete hands free removal and disposal of dirty mop heads.

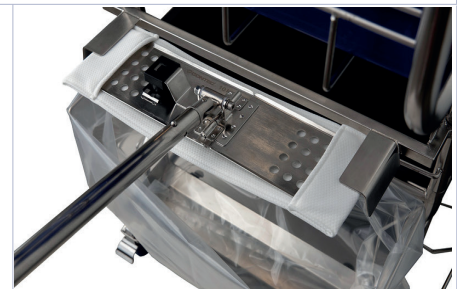

Integral mop holders - improved

Two improved design mop holders with handle hooks on either side of the trolley allow for convenient mop storage during transport and storage. The new design prevents an empty mop head frame from sliding around when the trolley is being moved.



"Quiet" castors - improved

The new castors provide a smoother ride on textured flooring creating one of the quietest cleanroom mopping trolleys on the market. Each castor locks and swivels independently for excellent manoeuvrability and so the trolley can be secured in position during cleaning.



Product Information	
Packaging Materials	• Cases corrugated fibreboard (PAP) ♻️
Materials of construction	
Trolley	• Stainless steel, type 304
Handle Clips	• Stainless steel
Diffuser/"A" frames/ Removal Tool	• Stainless steel, type 304
Castors	• Stainless steel with blue rubber wheels
Finish	• Electropolished
Mop Head Frames	• (2906) Stainless steel, type 304 and (2699P) Polypropylene
Buckets	• Polypropylene copolymer/stainless steel, type 316, deep drawn
Disposal Bags	• Low-density polyethylene (LDPE) ♻️

Dimensions

Mop Saturation System with
polypropylene buckets (2941U2D)



Trolley 63 (L) x 67 (W) x 104 (H) cm
Buckets 15.3 (L) x 48 (W) x 25 (H) cm

Mop Saturation System with
stainless steel buckets (2940U2SD)



Trolley 63 (L) x 67 (W) x 104 (H) cm
Buckets 17.0 (L) x 49 (W) x 20 (H) cm

Ordering Information

Part no.	Description	Packaging
2941U2D	Contec Hands-Free Mop Saturation System, two 15L polypropylene buckets, two x "A" frames, diffuser, utility handle with two 6L buckets and hands-free mop removal tool	Each
2940U2SD	Contec Hands-Free Mop Saturation System, two 10L stainless steel buckets, two x "A" frames, diffuser, utility handle with two 6L buckets and hands-free mop removal tool	Each

Quick Connect Mop Handles

2643	QuickConnect Telescopic Handle Anodised aluminium	1.30 - 2.30m	Each
2645	QuickConnect Telescopic Handle Stainless steel	1.30 - 2.30m	Each
2725E	QuickConnect Handle Stainless steel one piece	1.50m	Each
CFH70	QuickConnect Telescopic Handle Carbon Fibre	1.02 - 1.78m	Each
CFH114	QuickConnect Telescopic Handle Carbon Fibre	1.60 - 2.90m	Each
CFH224	QuickConnect Telescopic Handle Carbon Fibre	1.68 - 5.58m	Each

Hands Free Mop Removal

2906	QuickTask Magnetic Mop Head Frame Stainless steel	Each
2699P	QuickTask Magnetic Mop Head Frame Polypropylene	Each

Accessories and spares

PB6BS-3	Polypropylene utility bucket 6L	2 per case
UBKT0009	Red and grey 15L polypropylene buckets (set of two)	1 set per case
BNBG0001	Disposal bag for mop removal tools	80 bags/case
BNBG0002	Irradiated disposal bag for mop removal tools	80 bags/case
BKTBAG2	Sterile bucket bag liners for 15L polypropylene buckets	3 per bag / 20 bags per case

For more information or to request a trial or sample,
email infoeu@contecinc.com or phone + 33 (0) 2 97 43 76 98.

Copyright© 2024 Contec, Inc. All rights reserved. INT146 060224