

Compact Bucket Systems

Improved versatile multiple bucket system for use with Contec’s flat and curved mops

Contec’s autoclavable Compact Bucket System is an all-in-one solution to make cleaning and disinfecting easier and more efficient. The cart is designed for use with Contec® mops such as the VertiKlean® MAX™, VertiKlean® MAX™ Sealed Edge, EasyCurve® and QuickTask™ Mopping Systems.

The stainless steel cart is available in multiple configurations to meet the unique needs of your environment. It is available with either two or three autoclavable buckets and a utility cart handle. Each cart is fitted with quiet, easy to move casters that lock in place when needed. The utility handle allows two small buckets (1.6 gallon) or one large bucket (3.9 gallon) to be positioned on the handle providing additional storage for extra supplies such as clean mop heads, solution spray bottles, wipes, and other items as needed.

The cart frame has an integrated mop head removal tool on the front for easy, hands-free removal of a VertiKlean MAX or VertiKlean MAX Sealed Edge mop head. An optional hands-free removal tool is also available for both the VertiKlean MAX mop heads and the QuickTask mop heads. The VertiKlean MAX mop removal tool is also available mounted to frame for part numbers 2942U2BF and 2942U3BF. Two mop holders with mop brace and handle clasps on either side of the cart keep the mop in position and allow for convenient mop storage during transport and storage.

The systems are provided with stainless steel debris screens. The screen is positioned in the base of the clean and rinse buckets and prevents the mop from touching the bottom of the bucket where unwanted contaminants settle.



Features	Benefits
On cart storage for two mop handles and frames	<ul style="list-style-type: none"> • Allows convenient storage of two mop handles and frames keeping mops out of the way • Mop holders keep mops securely in place when changing locations
Improved castors and connections	<ul style="list-style-type: none"> • Significantly reduces noise during use • More durable attachments with less “rattle”
Compact polypropylene buckets with integral drip cap	<ul style="list-style-type: none"> • Keeps buckets in place while in use and prevents drips between the buckets and floor • Buckets can hold a curved or flat wringer for curved or flat mops
Integral mop head removal tool or optional hands-free mop head removal tool	<ul style="list-style-type: none"> • Allows easy hands-free removal of the VertiKlean MAX and QuickTask mop heads • Available as an option or attached to the cart frame • Used mop heads can easily be discarded
100% autoclavable, electropolished stainless steel cart	<ul style="list-style-type: none"> • Safe for autoclave at 121° C for 30 minutes allowing it to be used in the most critical environments • Compatible with most cleanroom disinfectants and cleaners
Utility handle basket holds 2 x 6 L buckets	<ul style="list-style-type: none"> • Additional storage for clean mop heads, solution bottles, wipes, and other cleaning supplies if needed

PDSM043 | 101725

Copyright © 2025 Contec, Inc. All rights reserved.

Part No.	Description	Size	Packaging
2942U2B	Compact Bucket System, two 15 L polypropylene buckets, with utility handle, two 6 L buckets and one debris screen	25" x 26.5" x 41" (63 x 67 x 104 cm)	1/case
2942U3B	Compact Bucket System, three 15 L polypropylene buckets, with utility handle, two 6 L buckets and two debris screens	32" x 26.5" x 41" (81 x 67 x 104 cm)	1/case
2942U3S	Compact Bucket System, three 10 L stainless steel buckets, with utility handle and two debris screens	32" x 26.5" x 41" (81 x 67 x 104 cm)	1/case
2942U2BF	Compact Bucket System, two 15 L polypropylene buckets, with VertiKlean MAX mop removal tool attached, utility handle, two 6L buckets and one debris screen	25" x 26.5" x 41" (63 x 67 x 104 cm)	1/case
2942U3BF	Compact Bucket System, three 15L polypropylene buckets, with VertiKlean MAX mop removal tool attached, utility handle, two 6L buckets and two debris screens	32" x 26.5" x 41" (81 x 67 x 104 cm)	1/case
Wringers			
2689	Stainless Steel Flat Wringer for polypropylene buckets	3.9 gallon (15 L)	1/case
2756	Stainless Steel Flat Downpress Wringer for polypropylene and stainless steel buckets	-	1/case
2690	Stainless Steel Curved Wringer for EasyCurve mops	3.9 gallon (15 L)	1/case
6029	Stainless Steel Flat Wringer for stainless steel buckets	2.6 gallon (10L)	1/case
Hands Free Mop Removal			
6033	VertiKlean MAX Hands-Free Mop Removal Tool For Compact Bucket System	-	1/case
6034	QuickTask Mop Removal Tool for Compact Bucket System	-	1/case
BNBG0001	Disposal bag for mop head removal tool	-	80/case
BNBG0002	Irradiated disposal bag for mop head removal tools	-	80/case
Accessories and Spares			
PB6BS-3	Polypropylene utility bucket	1.6 gallon (6 L)	2/case
UBKT0008	Red, Blue, and Gray polypropylene buckets	3.9 gallon (15 L)	1 set/case
UBKT0009	Red and Gray polypropylene buckets	3.9 gallon (15 L)	1 set/case
2675	Stainless steel debris screen for 15 L polypropylene buckets	-	1/case
BKTBAG2	Irradiated bucket liners 4 mil polyethylene Fits 3.9 gallon (15 L)	-	3/bag; 20 bags/case
6026	Replacement casters	-	1/case
6028	Stainless steel debris screen for 10 L bucket	-	1/case

Product Information	
Packaging Materials	Case (CS), corrugated fiberboard (PAP) ♻️
Materials of construction	
Cart	Stainless steel, type 304
Handle Clips	Stainless steel
Wringer and Removal tools	Stainless steel, type 304 (sold separately)
Casters	Stainless steel frames with blue rubber autoclavable wheels, type 304 SS
Finish	Electropolished
Mop frames	(2906, 2652LF, & 6208) Stainless steel, type 304 and (2699P) Polypropylene
Buckets	Polypropylene copolymer/stainless steel, type 316, deep drawn
Disposable Bags	Low-density polyethylene (LDPE) ♻️



2906



2652LF

Recycle Symbols



Dimensions



2942U2B

Cart
25" x 26.5" x 41"
(63 x 67 x 104 cm)

Buckets
6.7" x 20.3" x 10.2"
(17 x 51.5 x 26 cm)

Utility buckets
7.1" x 9.3" x 9.3"
(18 x 23.5 x 23.5 cm)



2942U3B

Cart
32" x 26.5" x 41"
(81 x 67 x 104 cm)

Buckets
6.7" x 20.3" x 10.2"
(17 x 51.5 x 26 cm)

Utility buckets
7.1" x 9.3" x 9.3"
(18 x 23.5 x 23.5 cm)



2942U2BF

Cart
25" x 26.5" x 41"
(63 x 67 x 104 cm)

Buckets
6.7" x 20.3" x 10.2"
(17 x 51.5 x 26 cm)

Utility buckets
7.1" x 9.3" x 9.3"
(18 x 23.5 x 23.5 cm)



2942U3BF

Cart
32" x 26.5" x 41"
(81 x 67 x 104 cm)

Buckets
6.7" x 20.3" x 10.2"
(17 x 51.5 x 26 cm)

Utility buckets
7.1" x 9.3" x 9.3"
(18 x 23.5 x 23.5 cm)



2942U3S

Cart
32" x 26.5" x 41"
(81 x 67 x 104 cm)

Buckets
6.9" x 19.1" x 7.9"
(17.5 x 48.5 x 20 cm)

Product Features

Quiet casters


Provide better performance on textured floors. All four casters lock, making it easier to use for cleaning and disinfecting.



Optional hands-free mop head removal tool: 6033 & 6034

The hands-free removal tool is optional for several of our systems and can be installed on the back of the cart. This stainless steel tool includes a frame for holding disposal bags. Note: For 6034, the QuickTask Magnetic mop head frames must be used - 2906 & 6208 (stainless steel) and 2699P (polypropylene).

The waste bag holder can be used with sterile or nonsterile waste bags for complete hands-free removal and disposal of dirty mop heads.

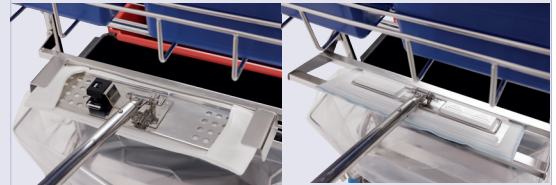


Pre-assembled Hands-Free Mop Removal Tool

The Compact Bucket System is available with the VertiKlean MAX hands-free mop removal tool attached to the frame upon delivery. This option is available in a 2-bucket polypropylene system (2942U2BF) and a 3-bucket polypropylene system (2942U3BF).



Integral mop holders

Two mop holders with handle hooks on either side of the cart allow for convenient mop storage during transport and storage.

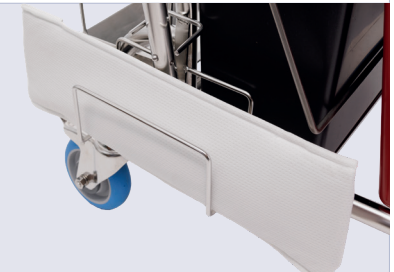

Integral debris screens

All systems are provided with stainless steel debris screens. The screen is positioned in the base of the clean and rinse buckets and prevents the mop from touching the bottom of the bucket where unwanted contaminants settle.

